

## **Installation Guide**

B00301USL B00301USL-316

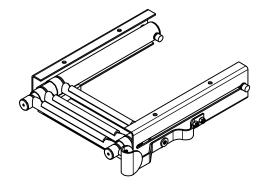


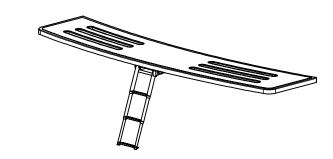




## **Required Materials (not included)**

- Safety glasses and rubber gloves
- Drill and bits
- 1/2" socket and ratchet
- Measuring tape
- Masking tape
- Pencil
- Marine adhesive/sealant (3M 4200 or equivalent)
- 4X 5/16" stainless bolts
- 4X 5/16" stainless washers
- Clean rags



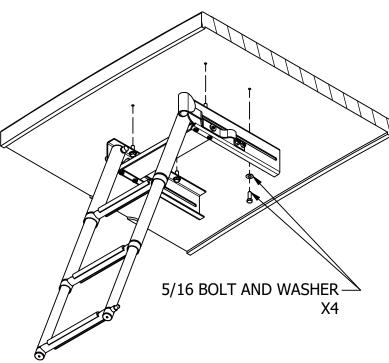

## **Instructions**

- 1. Determine suitable mounting location on flat underside surface. Consider proximity to grab rails above the platform as well as potential interferences. **Additional reinforcement may be required.**
- 2. Position ladder and mark fastener hole locations using the bracket as a template. It is recommended to offset the ladder 1/4" inside the platform edge to avoid snags with dock lines, etc. Tip: Cover surface using masking tape and make reference marks to position and align the ladder.
- 3. Drill mounting holes appropriate for selected 5/16" fastener. Any exposed core should be sealed to prevent water absorption. Use caution with carbon steel tools around stainless hardware. Surface contamination can lead to the appearance of rust.
- 4. Test fit ladder to be sure fastener holes are aligned and final position is as desired.
- 5. Remove all masking tape and prepare installation surface as recommended per selected adhesive/sealant instructions.
- 6. Bed entire mounting surface so a small amount of sealant is squeezed from all sides as fasteners are tightened. Clean up any excess sealant to leave a smooth joint between the bracket and mounting surface.
- 7. Wipe down metal surfaces using Stainless Steel polish/protectant.