


Installation Guide

8000S Stainless Steel 1/4 Turn Retainer Latch




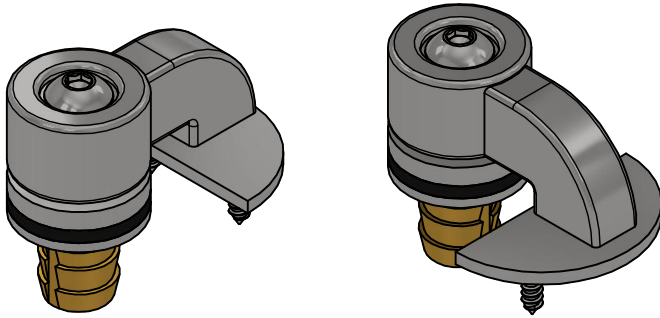


WHITE WATER
MARINE HARDWARE



Required Materials (not included)

- Safety glasses
- Drill and bits (3/8" & 1/16")
- Masking tape
- Ruler
- Pencil
- Rubber Mallet

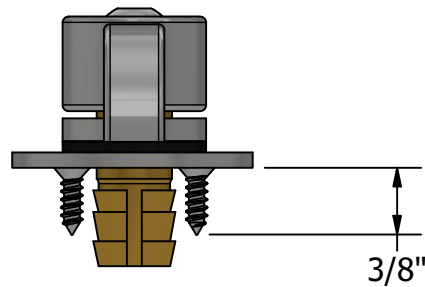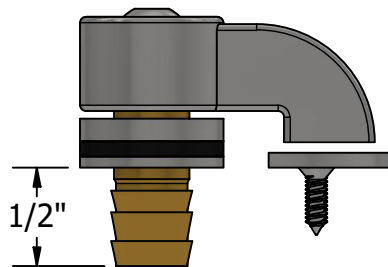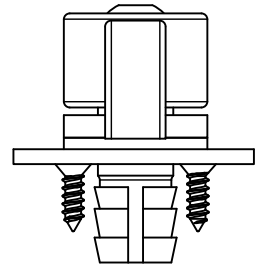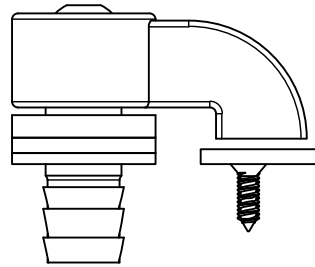

Instructions

1. Identify a suitable location for the Retainer Latch.
 2. Confirm that the wood is strong enough to support the Bronze Mounting Stud. Apply masking tape over the area to be drilled to prevent splintering.
 3. Apply masking tape at the second location and mark the two mounting holes for the cover cap plate.
 4. Using a 1/16" drill bit, drill approximately 3/8" deep at each marked point. Make sure to use a 3/16" countersink bit to ensure flush fitment.
- Remove the tape. Position the plate over the drilled holes, and use a mallet to tap it securely into place.
- Using a 3/8" drill bit, drill approximately 1/2" deep at the marked location.
- Apply a small amount of Glue Epoxy into the drilled hole to ensure a secure bond.
- Remove the tape. Position the Retainer Latch over the drilled hole, and use a mallet to tap it firmly into place. Before securing, verify the open and closed positions, as the latch rotates 90°.
- The latch should now hold the door securely closed and release with a 90° turn.